


# PLAYGUARD<sup>®</sup>

SAFETY SURFACING


ecore

715 FOUNTAIN AVENUE  
LANCASTER, PA 17601  
TOLL FREE: 1-800-851-4746  
PHONE: (717)295-3400  
FAX: (717)295-3414  
www.playguardsurfacing.com

THE TECHNIQUES USED TO LAYOUT THE DECK FOR TILE PLACEMENT ARE NUMEROUS. FOR THE PURPOSES OF ILLUSTRATION THE FOLLOWING METHOD IS RECOMMENDED BY CSSI.

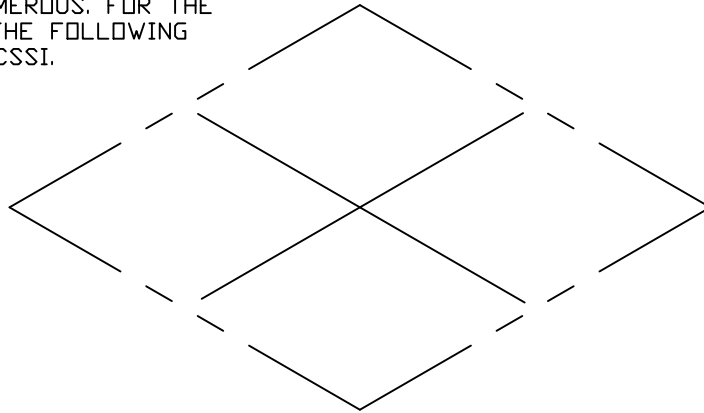


STEP 1: SNAP PERPENDICULAR CHALKLINES REPRESENTING THE CENTER OF THE DECK AREA.

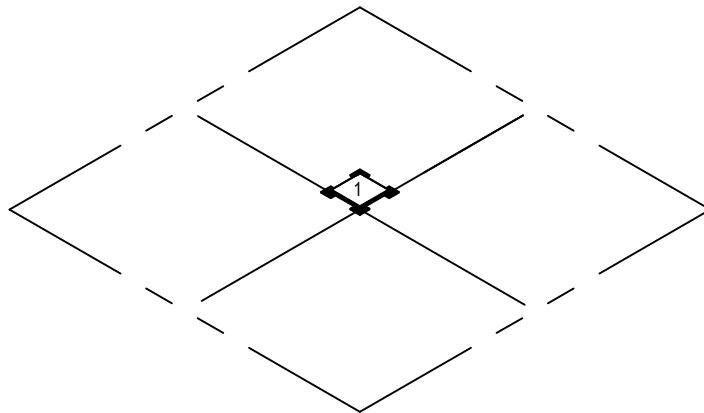

STEP 2: PLACE THE FIRST TILE AT THE INTERSECTION OF THE CHALKLINES CAREFULLY ALIGNING TO ADJACENT SIDES OF THE TILE WITH THE LINES.


NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. COLOUR TO BE CONFIRMED WITH OWNER PRIOR TO INSTALLATION.

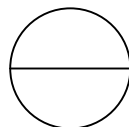


TILE LAYOUT TECHNIQUE

PLAYGUARD, PAGE 1 OF 2

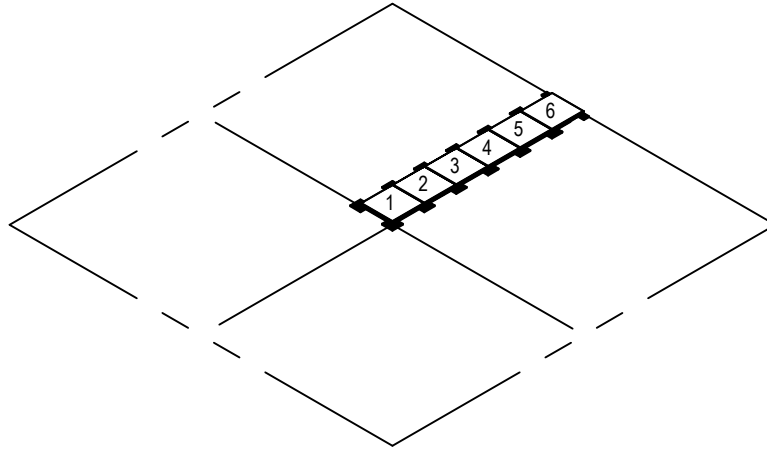

STEP 3: PREPARE AND PLACE QUAD-BLOKS AS SHOWN ON DETAIL QBS-2 AND LAY TILES ALONG CHALKLINE IN ONE QUADRANT IN THE SEQUENCE AS SHOWN.

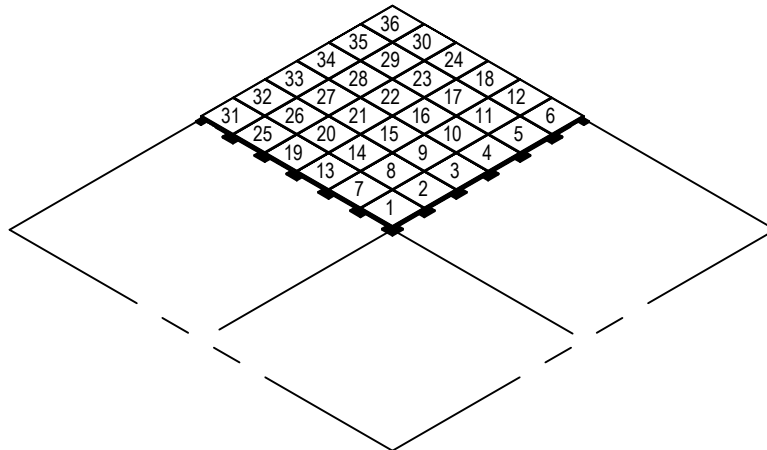

COMPLETE THE FIRST QUADRANT SEQUENCE AS SHOWN. COMPLETE REMAINING QUADRANTS IN SIMILAR FASHION. SEE DETAILS 336-016 AND 336-017 FOR VARIOUS EDGE TREATMENTS.

**NOTES:**

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. COLOUR TO BE CONFIRMED WITH OWNER PRIOR TO INSTALLATION.

